

All Valley Party Rental

10241 Woodley Ave. North Hills, CA 91343 (818) 891-3676

All Valley Party Rental assumes no responsibility for the below information.
This document is provided as a courtesy. Use at your own risk.

FOUNTAIN INSTRUCTIONS

1. A heavy duty extension cord can be used if needed. Plug cord into a 120 volt AC grounded electric outlet only. This rental item must be used on an isolated electrical circuit. This item will not operate properly on a shared circuit.

****IMPORTANT: DO NOT RUN FOUNTAIN DRY. DO NOT IMMERSE BASE OF FOUNTAIN IN WATER.****
2. Pre-cool beverage when possible. Slight overcooling is recommended. Fountain will not keep punch cold.
 - The night before freeze some of the punch in ice trays. Place in the bowl with punch. As the ice melts, the punch will not be watered down.
 - Place ice cubes in a plastic bag.
 - Use several small pieces of dry ice.
3. **DO NOT** use fruit juice with pulp.
4. Place punch in bottom bowl.
5. Plug in and turn on the fountain.
 - Punch will be drawn up through middle of the fountain.
 - Pool at the top layer.
 - Flow down the chains to second level.
 - Fill cups from spouts under second level.
6. When finished with fountain, turn off and unplug. Empty any remaining punch from the bowl. Fill the fountain with warm water and turn on fountain to allow water to circulate.