

All Valley Party Rental

10241 Woodley Ave. North Hills, CA 91343 (818) 891-3676

All Valley Party Rental assumes no responsibility for the below information.
This document is provided as a courtesy. Use at your own risk.

MARGARITA MACHINE INSTRUCTIONS

1. Machine can not be run dry.
2. Not to be used in direct sunlight.
3. Must have a dedicated electrical supply.
4. Make sure to follow the directions on the container of concentrated.
5. Bring the contents of the concentrate (1/2 gal) plus 2 gallons of water together, mix thoroughly in bucket or container, and pour mixture into a bowl.
6. Turn the machine on after filling it- **DO NOT RUN DRY!**

It usually takes about 45 minutes for the mixture to get "slushy" and ready to serve!

TO OPERATE: Press main power switch (the lighting bolt) to ON. For sluch, press the cooler switch to UP position (the rain drops).

TO ILLUMINATE THE MIX TANK COVER DISPLAY: On top of the unit and product in the bowl, press the display light switch to DOWN position (the light bulb).

TO ADJUST THE DENSITY/CONSISTENCY: Of the slush, there is an adjustment knob at the rear, right corner of the dispenser.

- To firm up the product, turn the set knob **COUNTER CLOCKWISE**, which will move the indicator down to a higher number position.

- To soften/warm up the product, turn the set knob **CLOCKWISE**, which will move the indicator UP to lower number position.

TO CLEAN: After using the machine, fill hopper with warm water and drain. Do not take parts off machine.